


Service Manual

FM-AM 4 BAND
PORTABLE RADIO

Radio
RF-1130LB

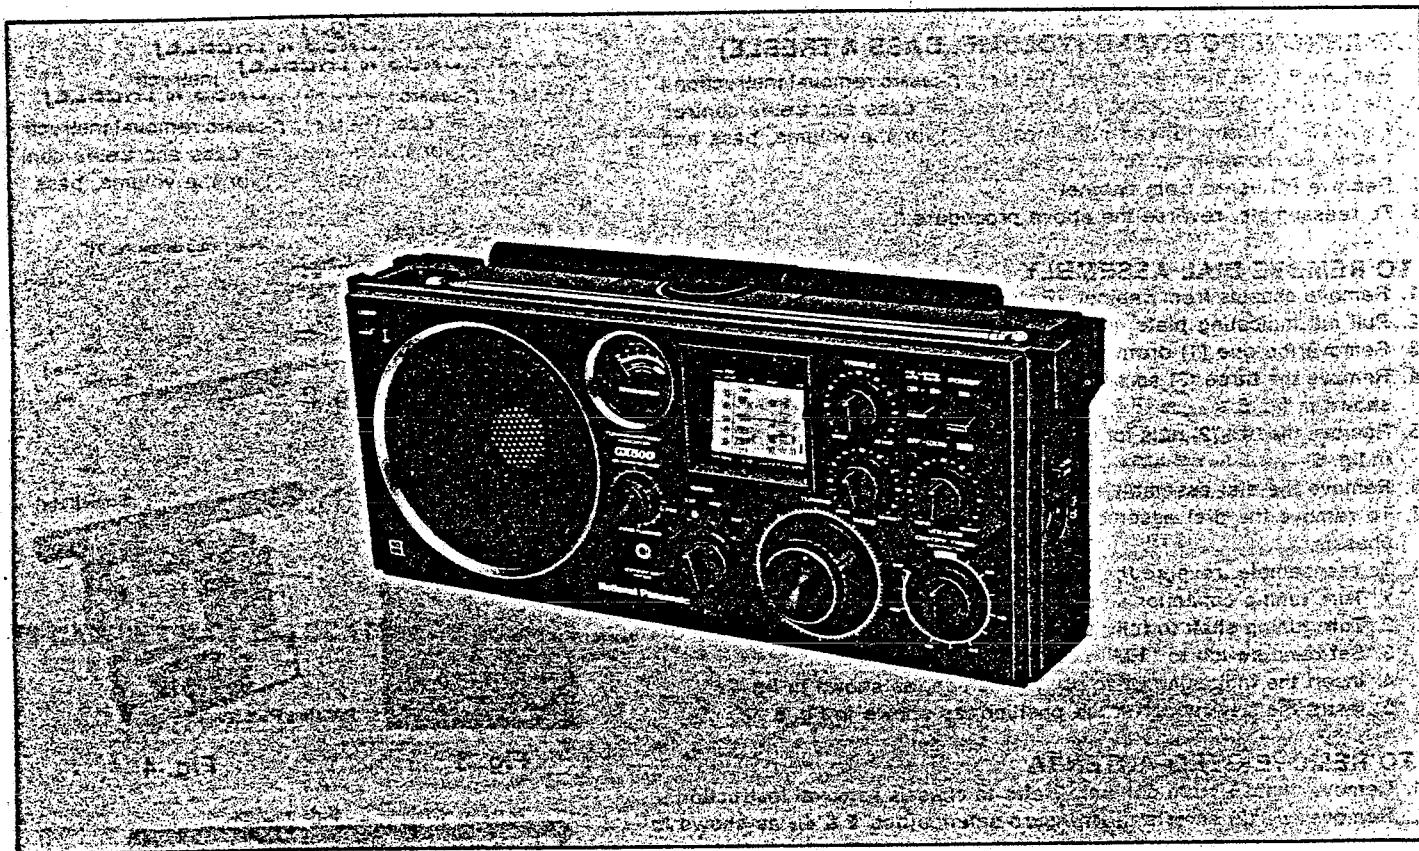

■ SPECIFICATIONS

Frequency Range:	FM	87.5~108 MHz
	LW	145~355 kHz (2060~845m)
	MW	520~1610 kHz (577~186m)
	SW	5.9~18 MHz (50.8~16.7m)
Intermediate Frequency:	FM	10.7 MHz
Sensitivity:	AM (LW, MW & SW)	455 kHz
	FM	2 μ V for 30 dB Quieting
	LW	100 μ V/m for 50mW Output
	MW	30 μ V/m for 50mW Output
Power Output:	SW	3 μ V/m for 50mW Output
		3.3W Maximum
Power Source:	AC	110~125V/220~240V 50-60 Hz
		or 6V (Four "C" Size Flashlight Batteries) (National UM-2 or equivalent)

Power Consumption:	7W (AC Only)
Speaker:	12cm(5") PM Dynamic Speaker
Dimensions:	340(Wide) x 144(High) x 83(Deep)mm (13 $\frac{1}{2}$ " x 5 $\frac{3}{4}$ " x 3 $\frac{1}{8}$ ")
Weight:	1.92 kg. (4 lb. 3.7 oz.) without batteries
Impedance:	Speaker.....8 Ω
	Earphone Jack.....8 Ω
	FM Antenna Terminal75 Ω
	DIN Jack
	Phono1M Ω
	Recording Out70k Ω

Specifications are subject to change without notice for further improvement.

 **National Panasonic**

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka, Japan

■ TO REMOVE CHASSIS

1. Remove the three (3) knobs for the tuning, fine tuning and band.
2. Lift up the gyro-antenna.
3. Remove the battery cover.
4. Remove the five (5) screws (nos. 1~5) for the cabinet back cover, as shown in fig. 1.
5. Remove the cabinet back cover.
6. Pull out sockets from chassis.
7. Remove the seven (7) red screws (nos. 1~7) for the chassis, as shown in fig. 2.
8. Lift up the telescopic antenna.
9. Remove chassis from cabinet.
10. To reassemble, reverse the above procedure.

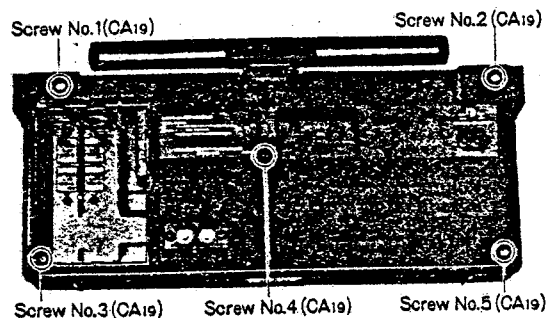


Fig. 1

■ TO REMOVE PC BOARD (VOLUME, BASS & TREBLE)

1. Remove the cabinet back cover. (Refer to chassis removal instruction.)
2. Remove the three (3) knobs for the volume, bass and treble control.
3. Remove the three (3) red nuts (nos. 1~3) for the volume, bass and treble, as shown in fig. 3.
4. Remove PC board from cabinet.
5. To reassemble, reverse the above procedure.

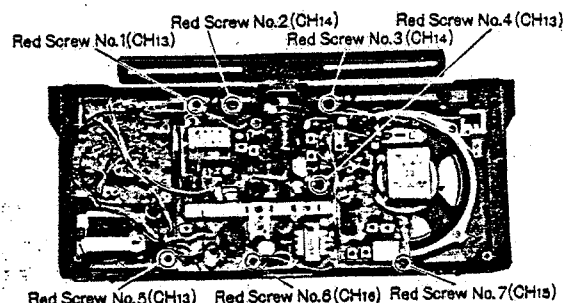


Fig. 2

■ TO REMOVE DIAL ASSEMBLY

1. Remove chassis from cabinet. (Refer to chassis removal instruction.)
2. Pull out indicating plate, as shown in fig. 4.
3. Remove the one (1) drum screw, as shown in fig. 4.
4. Remove the three (3) screws (nos. 1, 3 & 4) for the dial assembly, as shown in fig. 5.
5. Remove the two (2) nuts for the fine tuning and band switch, as shown in fig. 6.
6. Remove the dial assembly from chassis.
7. To remove the dial assembly completely, unsolder lead wires from chassis.
8. To reassemble, reverse the above procedure and note the following.
 1. Turn tuning capacitor shaft to fully counter-clockwise.
 2. Turn tuning shaft to fully counter-clockwise.
 3. Set band switch to "FM" position.
 4. Insert the indicating plate at the position, as shown in fig. 7.
 5. Insert the fine tuning at the position, as shown in fig. 8.

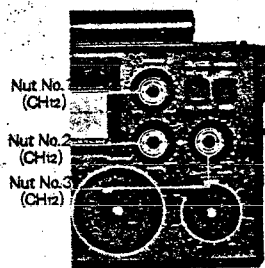


Fig. 3

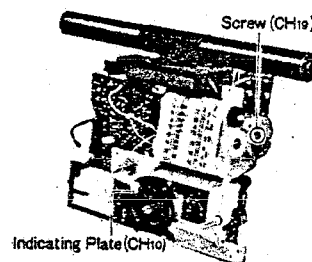


Fig. 4

■ TO REMOVE GYRO-ANTENNA

1. Remove chassis from cabinet. (Refer to chassis removal instruction.)
2. Remove two (2) screws for the gyro-antenna (nos. 2 & 4), as shown in fig. 5.
3. Remove gyro-antenna from chassis.
4. To remove gyro-antenna completely unsolder lead wires from chassis, as shown in fig. 5.
5. To reassemble reverse the above procedure.

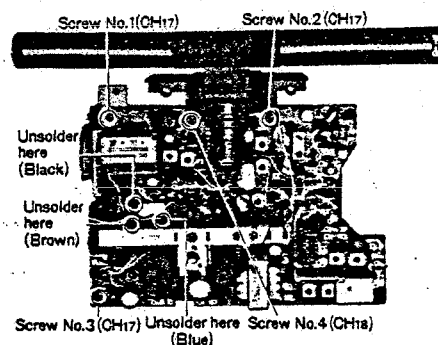


Fig. 5

■ TO REMOVE FERRITE ANTENNA

1. Remove gyro-antenna cover in the direction of arrow, as shown in fig. 9.
2. Unsolder lead wires from ferrite antenna, as shown in fig. 10.
3. To reassemble, reverse the above procedure.

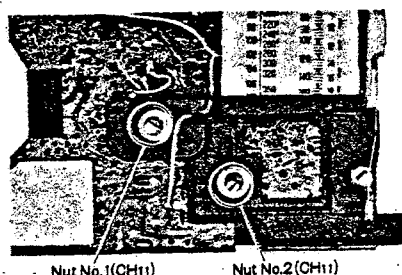


Fig. 6

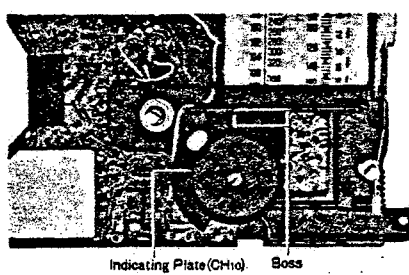


Fig. 7

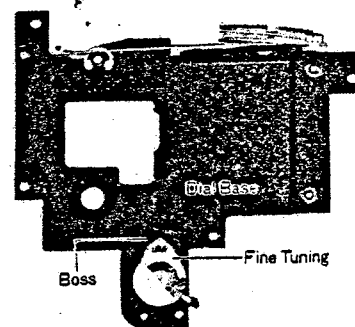


Fig. 8

■ DIAL CORD INSTALLATION GUIDE

1. Remove chassis from cabinet. (Refer to chassis removal instruction.)
2. Dial cord length is 90 cm (35 $\frac{7}{16}$ "').
3. Loosen dial drum screw, as shown in fig. 12.
4. Set each dial drum at the position, as shown in fig. 12.
5. Arrows (1~10) indicate correct order and direction of cord installation, as shown in fig. 12.
6. Cement dial cord ends.
7. Turn tuning shaft fully counter-clockwise.
8. Set start point of the dial with the boss, as shown in fig. 11.
9. Tighten the drum screw, as shown in fig. 12.

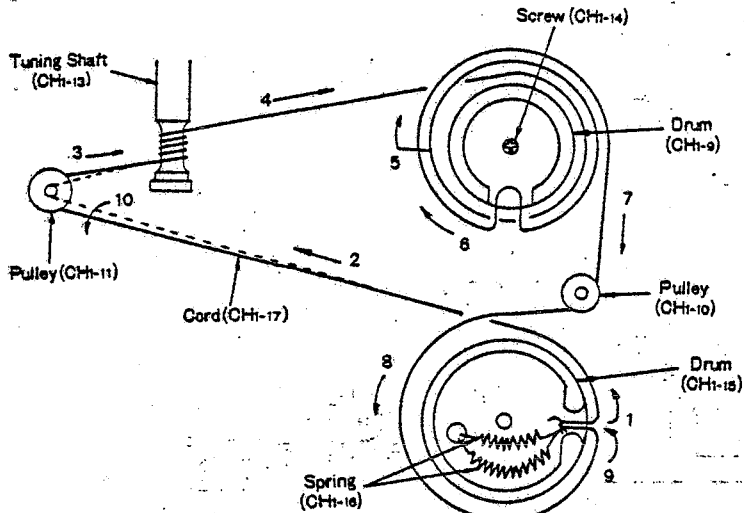


Fig. 12

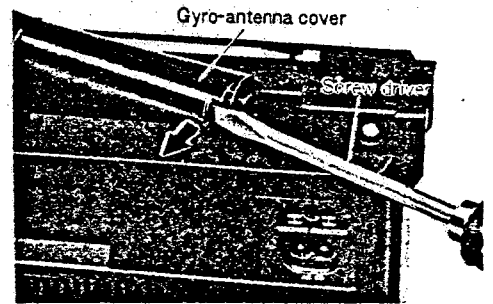


Fig. 9

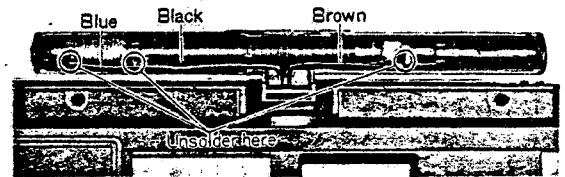


Fig. 10

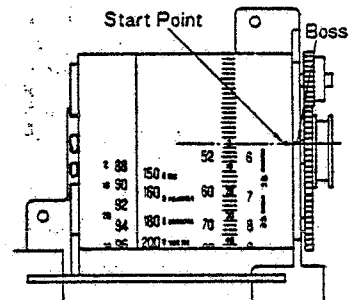


Fig. 11

■ CABINET PARTS LOCATIONS

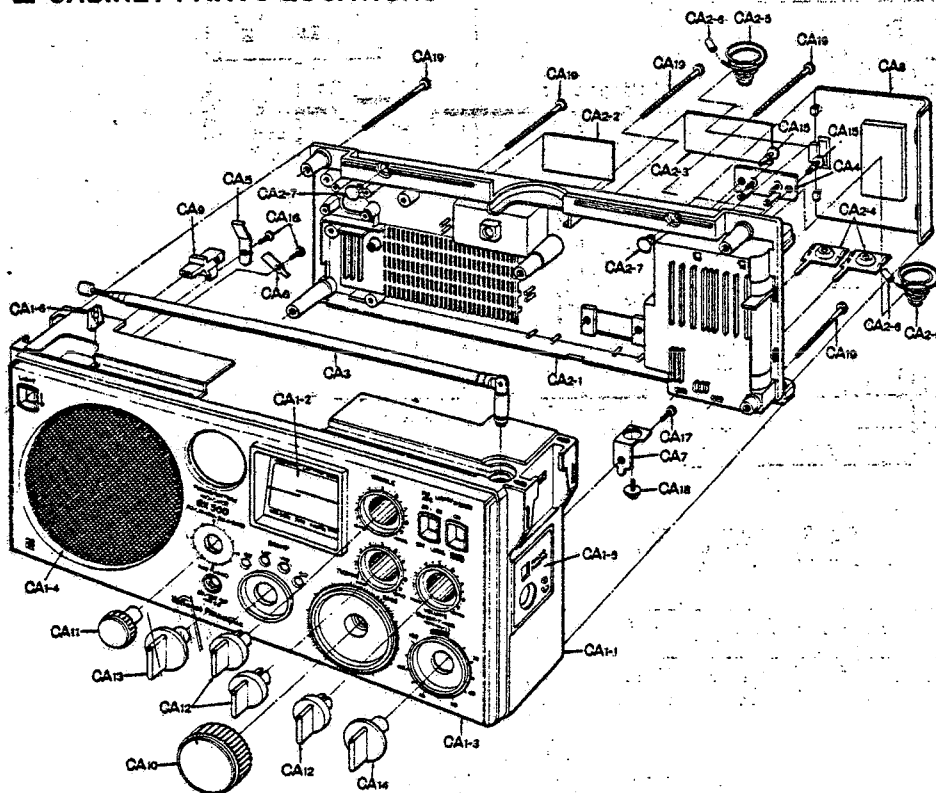


Fig. 13

■ CHASSIS PARTS LOCATIONS

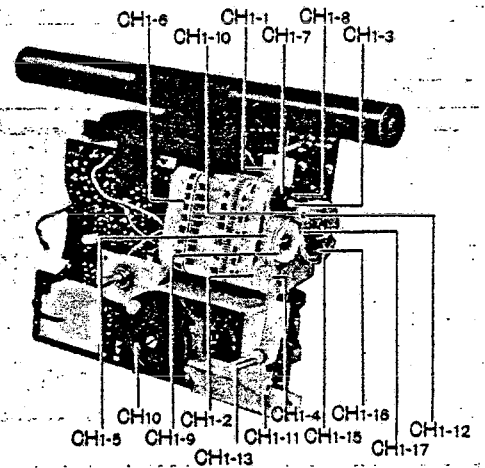


Fig. 14


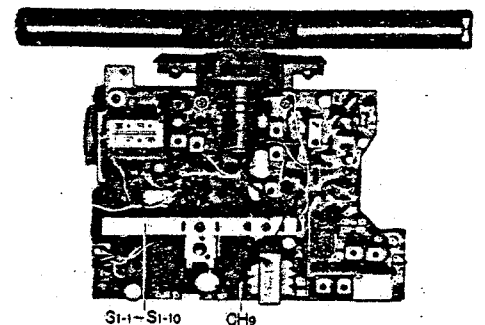


Fig. 15

- Set volume control to minimum.
- Set power source voltage to 6 volts DC.

2. REMARKS

- Adjust R₄₄ so that the pointer of meter stays as shown in figure right.

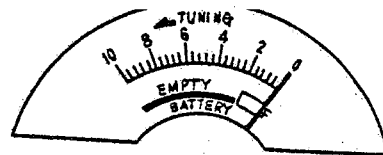

■ ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Notes:

1. Set volume control to MAX.
2. Set bass control to MAX.
3. Set treble control to MAX.
4. Set band selector switch to FM, LW, MW or SW.
5. Set power switch to ON.
6. Set FM AFC/LW/MW SENS switch to DX or OFF (FM).
7. Set fine tuning to center.
8. Set power source voltage to 6 volts DC.
9. Output of signal generator should be no higher than necessary to obtain an output reading.

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING (DISTANCE)	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
CONNECTIONS	FREQUENCY				
LW ALIGNMENT					
Fashion loop of several turns of wire and radiate signal into loop of receiver.	455 kHz 30% Mod. with 400 Hz.	Point of non-interference. (on/about 600 kHz)	Output meter across voice coil.	T ₂ (1st IFT) T ₄ (2nd IFT)	Adjust for maximum output.
"	145 kHz	145 kHz [Fig. 20]	"	L ₉ (OSC Coil) (*1) L ₆ (ANT Coil)	Adjust for maximum output. Adjust L ₆ by moving coil bobbin along ferrite core.
"	350 kHz	350 kHz [Fig. 21]	"	C ₇₀ (OSC Trimmer) C ₅₁ (ANT Trimmer)	Adjust for maximum output. Repeat steps (2) and (3).
MW ALIGNMENT					
"	550 kHz	550 kHz [Fig. 22]	"	L ₁₀ (OSC Coil) (*1) L ₇ (ANT Coil)	Adjust for maximum output. Adjust L ₇ by moving coil bobbin along ferrite core.
"	1500 kHz	1500 kHz [Fig. 23]	"	C ₇₄ (OSC Trimmer) C ₁₀₉ (ANT Trimmer)	Adjust for maximum output. Repeat steps (4) and (5).
(*1) Cement antenna bobbin with wax after completing alignment.					
SW ALIGNMENT					
Connect to point TP ₁ through 10PF capacitor. Common to point E.	5.9 MHz	5.9 MHz [Fig. 24]	"	L ₁₁ (OSC Coil) L ₈ (ANT Coil)	Adjust for maximum output.
"	18 MHz	18 MHz [Fig. 25]	"	C ₇₅ (OSC Trimmer)	Adjust for maximum output. Repeat steps (6) and (7).
FM-IF ALIGNMENT					
High side thru. 0.001μF to point TP ₂ . Common to chassis. Negative side to point E.	10.7 MHz (400 kHz SWP.)	Point of non-interference. (on/about 90 MHz).	Connect vert. amp. of scope to point TP ₃ . Negative side to point E.	T ₁ (FM 1st IFT) T ₃ (FM 2nd IFT) T ₅ (FM 3rd IFT) (Primary)	Adjust for maximum amplitude and proper linearity between ±100 kHz markers. (Refer to fig.17.)
"	"	"	"	T ₆ (FM 3rd IFT) (Secondary)	Adjust T ₆ so that 10.7 MHz marker appears at the center. (Refer to fig.18.)
FM-RF ALIGNMENT					
Connect to point TP ₁ through FM dummy antenna. Negative side to point E. (Refer to fig.19).	87.2 MHz	Variable capacitor fully closed.	Output meter across voice coil.	L ₅ (FM OSC Coil)	(*2) Adjust for maximum output.
"	90 MHz	Tune to signal.	"	L ₃ (FM Tuning Coil)	(*2) Adjust for maximum output.
"	106 MHz	106 MHz [Fig. 26]	"	C ₁₇ (FM OSC Trimmer) C ₈ (FM Tuning Trimmer)	(*2) Adjust for maximum output. Repeat steps (10)~(12).
(*2) Three output responses will be present; proper tuning is the center frequency.					

ALIGNMENT POINTS

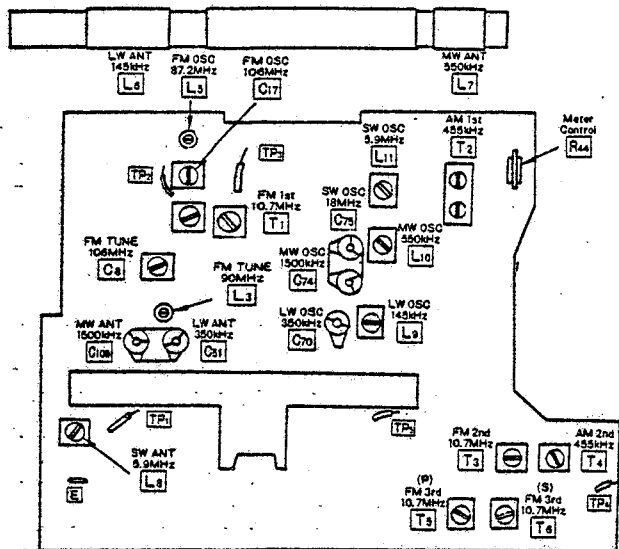


Fig. 16

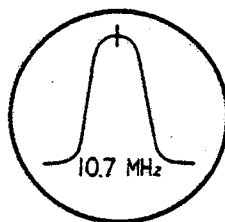


Fig. 17

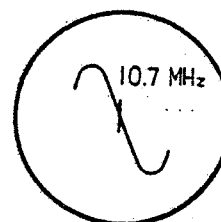


Fig. 18



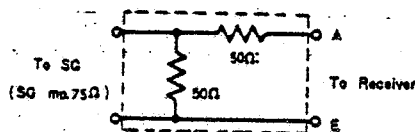



Fig. 19 FM Dummy Antenna

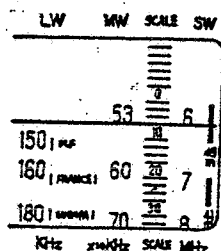


145 kHz (LW)
Fig. 20

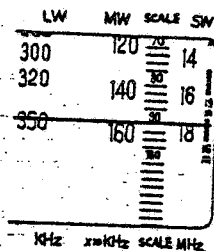


350 kHz (MW)
Fig. 21

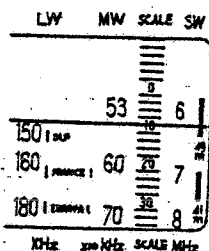


550 kHz (SW)
Fig. 22

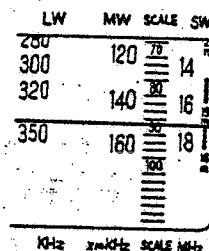


1500 kHz (FM)
Fig. 23

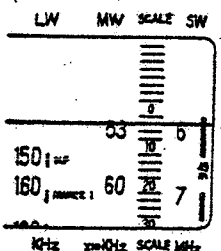

5.9 MHz (LW)
Fig. 24

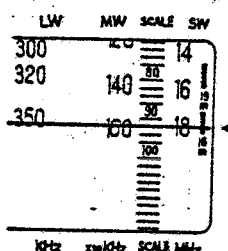

18 MHz (MW)
Fig. 25

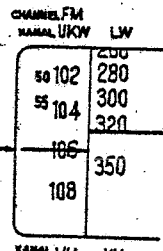

106 MHz (FM)
Fig. 26

CHASSIS PARTS LOCATIONS

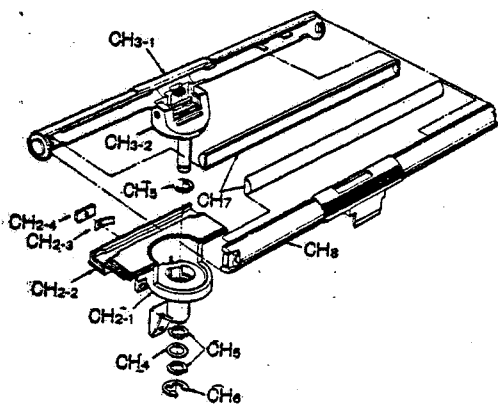


Fig. 27

ACCESSORIES AND PACKING MATERIALS

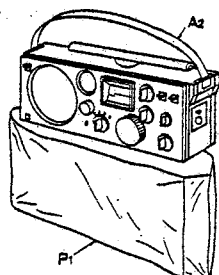


Fig. 28

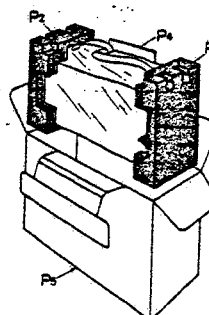


Fig. 29

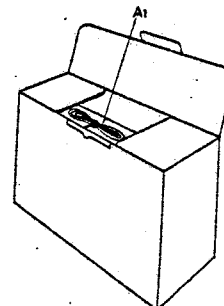


Fig. 30

REPLACEMENT PARTS LIST..... Model RF-1130LB

RF-1130LB

Notes: 1. Part numbers are indicated on most mechanical parts.
Please use this part number for parts orders.
2. X-Z rank: X rank parts will cover 80% of repair needs.
X+Y rank parts will cover 95% of repair needs.
Z rank parts are less necessary.
3. ~~mm~~ Indicates that only parts specified by the manufacturer be used for replacement in critical circuit.

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
INTEGRATED CIRCUIT, TRANSISTORS AND DIODES				
IC	AN210	IO(Si), FM-AM IF Amplifier	1	X
TR1,6	2SK49	Transistor(Si), FM RF Amplifier, AM RF Amplifier	2	X
TR2	2SC1359	Transistor(Si), FM Oscillator	1	X
TR3,4,7,8	2SC1675	Transistor(Si), FM-AM Mixer, FM 1st IF Amplifier, AM Oscillator	4	X
TR5	2SC829	Transistor(Si), FM 2nd IF Amplifier	1	X
TR9	2SC828	Transistor(Si), Meter Amplifier	1	X
TR10	2SC1327	Transistor(Si), PRB Amplifier	1	X
TR11,13	2SC945	Transistor(Si), 1st AF Amplifier, Ripple Filter	2	X
TR12	2SB173	Transistor(Ge), 2nd AF Amplifier	1	X
TR14,15	2SC1568	Transistor(Si), Power Amplifier	2	X
D1	1B2687AA	Diode(Si), FM AFC	1	X
D2,6,7	OA90	Diode(Ge), AM D.AGC, AM Detector & AGC, FM Rectifier	3	X
D3,4,11	RVDVD1251L	Diode(Si), Power Operation Compensator, Operation Compensator	3	X
D5,14	MA150	Diode(Si), Switching	2	X
D8,9	2-OA90	Diode(Ge), FM Detector	1Pair	X
D10	RVDVD1150L	Diode(Si), Power Operation Compensator	1	X
D12,13	RVDSM102LF	Diode(Si), AC Rectifier	2	X
CERAMIC FILTER, COILS AND TRANSFORMERS				
CF1,2	RVFCF10M12FR	Ceramic Filter, FM	2	X
L1	RLQY30S1-O	Trap Coil	1	Y
L2	RLA4Y6-O	Coil, FM Antenna	1	X
L3	RLD4N30-O	Coil, FM Detector	1	X
L4	RLI4M103	Coil, FM IF Trap	1	X
L5	RLO4N22	Coil, FM Oscillator	1	X
L6,7	RLF6G23-O	Coil, LW-MW Ferrite Antenna	1	OX
L8	RLA3M10-K	Coil, SW Antenna	1	OX
L9	RL01M1	Coil, LW Oscillator	1	OX
L10	RLO2M6	Coil, MW Oscillator	1	OX
L11	RLO3M30-K	Coil, SW Oscillator	1	OX
L12,13,15	RLQY11G4-O	Coil, Choke	3	Y
L14	RLQY15S3-O	Coil, Choke	1	Y
T1	RLI4M301	IFT, FM	1	X

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
T2	RLI7W112-T	IFT, AM	1	X
T3	RLI4M302	IFT, FM	1	X
T4	RLI2M402	IFT, AM	1	X
T5	RLI4M501	IFT, FM	1	X
T6	RLI4M502	IFT, FM	1	X
T7	RLT3P41	Input Transformer, Imp. P-700Ω:S-1KΩ	1	X
T8	RLT2H25-V	Output Transformer, Imp. P-75Ω:S-8Ω	1	X
T9	RLT5J188-W	Power Transformer	1	OX mm
VARIABLE RESISTORS				
R66	EVH0XAF25D54	Variable Resistor, 50KΩ(D), Volume Control	1	OX
R62,65	EVH0XAF25B54	Variable Resistor, 50KΩ(B), Bass & Treble Control	2	OX
R44	EVLTA4A00B13	Semi-Fixed Variable Resistor, 1KΩ(B), Meter Control	1	X
VARIABLE CAPACITORS				
C7,16,57,78	ROVOY410153	Tuning Capacitor	1	X
C70	RCV1T-16M	Trimmer Capacitor	1	X
C51,74,75,109	RCV2T-16M	Trimmer Capacitor	2	X
C8,17	RCVCTY12B218	Trimmer Capacitor	2	X
C79	ECV-1YW02D73A	Fine Tuning Capacitor	1	X
COMPONENT COMBINATIONS				
Z1	RXABPF10801H	Component Combination, Coil & Capacitor	1	Y
Z2	EXAF203Z471R	Component Combination, 0.01μF×2, 470Ω	1	Y
Z3	EXA5DL040C	Component Combination, 330PF×3, 4.7KΩ×2	1	Y
Z4	RXAF103P22HD	Component Combination, 0.01μF×2	1	Y
SPEAKER				
SP	EAS12P78SB	Speaker, 12cm(5") PM Dynamic Speaker, Imp.8Ω	1	OX
SWITCHES				
S1-1~S1-10	RSR116ZK-P	Switch, Band	1	OX
S2-1,S2-2	RST59X-G	Switch, FM AFC, LW/MW SENS	1	X
S4	RST59V-G	Switch, Power	1	OX
S5	RSE50Z-T	Switch, Timer	1	X
S7	RSS2B02Z-H	Switch, Radio-Phono	1	OX
S8	RSR12A	Switch, Voltage Selector	1	X

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
RESISTORS				
R7,14,18,47,56	ERD25TJ102	1K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	5	Z
R2,46,90	ERD25TJ824	820K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R55,95	ERD25TJ150	15 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R50,96	ERD25TJ101	100 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R67	ERD25TJ220	22 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R74	ERD25TJ151	150 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R21	ERD25TJ221	220 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R10,12,49	ERD25TJ331	330 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R75	ERD25TJ471	470 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R48,81	ERD25TJ561	560 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R15	ERD25TJ222	2.2K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R72	ERD25TJ272	2.7K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R94	ERD25TJ104	100K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R78,82,92	ERD25TJ154	150K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R91	ERD25TJ334	330K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R58,68	ERD25TJ474	470K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R98,102	ERD25TJ100	10 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R70	ERD25TJ330	33 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R101	ERD25TJ153	15K Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R76	ERX12ANJR22	0.22 Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Metal Oxide	1	Z
R51	ERD18VJ155	1.5M Ω , $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
CAPACITORS				
C55,118	ECGD1H0100	1PF, 50WV, ± 0.25 PF, Ceramic	2	Z
C15	ECGD1H1R5C	1.5PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C43	ECGD1H2R5C	2.5PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C11	ECGD1H0400	4PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C71	ECGD1H0500C	5PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C107,111	ECGD1H070DC	7PF, 50WV, ± 0.5 PF, Ceramic	2	Z
C1,3,12	ECGD1H100K0	10PF, 50WV, $\pm 10\%$, Ceramic	3	Z
C21,114	ECGD1H120K0	12PF, 50WV, $\pm 10\%$, Ceramic	2	Z
C9	ECGD1H150K0	15PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C10	ECGD1H470K0	47PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C115	ECGD1H560K0	56PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C18	ECGD1H120KU	12PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C29	ECGD1H101K	100PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C41,49,112	ECGD1H181K	180PF, 50WV, $\pm 10\%$, Ceramic	3	Z
C58,92,99	ECGD331K	330PF, 50WV, $\pm 10\%$, Ceramic	3	Z
C2,5,13,34,100,106	ECKE1H102PF	0.001 μ F, 50WV, $\pm 10\%$, Ceramic	6	Z
C19,24,25,26,28,37,48,59,82,65,77	ECKE1H103PF	0.01 μ F, 50WV, $\pm 10\%$, Ceramic	11	Z
C32,60	ECKE1H223PF	0.022 μ F, 50WV, $\pm 10\%$, Ceramic	2	Z
C27	ECKE1H681MD	680PF, 50WV, $\pm 20\%$, Ceramic	1	Z
C6,67,101	ECKE1H102MD	0.001 μ F, 50WV, $\pm 20\%$, Ceramic	3	Z
C63,123	ECKE1H222MD	0.0022 μ F, 50WV, $\pm 20\%$, Ceramic	2	Z
C20,68,73,82,119	ECKE1H103MD	0.01 μ F, 50WV, $\pm 20\%$, Ceramic	5	Z
C33,36,39,40,46,61,80,86,95,96,103	ECKE1H223MD	0.022 μ F, 50WV, $\pm 20\%$, Ceramic	11	Z

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
O98,120	ECKE1H682MD	0.0068 μ F, 50WV, $\pm 20\%$, Ceramic	1	Z
O83,89,113	ECQG05333MZ	0.033 μ F, 50WV, $\pm 20\%$, Polyester	3	Z
O87	ECQG05683MZ	0.068 μ F, 50WV, $\pm 20\%$, Polyester	1	Z
O89	ECMS05181J-H	180PF, 50WV, $\pm 5\%$, Mica	1	Z
O72	ECQS1361JZ	360PF, 125WV, $\pm 5\%$, Styrol	1	Z
O84	ECQS1152KZ	1500PF, 125WV, $\pm 10\%$, Styrol	1	Z
O108	ECQS05392KZ	3900PF, 50WV, $\pm 10\%$, Styrol	1	Z
O121	ECQG05152MZ	0.0015 μ F, 50WV, $\pm 20\%$, Polyester	1	Z
C30,44,125	ECQG05473MZ	0.047 μ F, 50WV, $\pm 20\%$, Polyester	3	Z
C31,126	ECEA16V47	47 μ F, 16WV, Electrolytic	2	Y
C35,50,93	ECEA10V100	100 μ F, 10WV, Electrolytic	3	Y
O85,94	ECEA6V220	220 μ F, 6.3WV, Electrolytic	2	Y
O97,124	ECEA10V1000	1000 μ F, 10WV, Electrolytic	2	Y
C38,42	ECEA16V10	10 μ F, 16WV, Electrolytic	2	Y
C47	ECEA35V4R7	4.7 μ F, 35WV, Electrolytic	1	Y
C81,84,91	ECEA50V1	1 μ F, 50WV, Electrolytic	3	Y
C22,116,117	ECKE1H333PF	0.033 μ F, 50WV, $\pm 10\%$, Ceramic	3	Z
C45	ECKE1H153MD	0.015 μ F, 50WV, $\pm 20\%$, Ceramic	1	Z
O88,122	ECKE1H472MD	0.0047 μ F, 50WV, $\pm 20\%$, Ceramic	2	Z
C90	ECEA50ZR1E	0.1 μ F, 50WV, Electrolytic	1	Y
CABINET				
CA1	RYMF1130LBXG	Cabinet Assembly	1	OX
CA1-1		Cabinet Body Only	(1)	
CA1-2		Transparent Cover	(1)	
CA1-3	Not Available, Order	Indicating Plate, GX500, National Panasonic & etc. Mark	(1)	
CA1-4	RYMF1130LBXG	Metal Grille	(1)	
CA1-5		Indicating Plate, RADIO, PHONO & etc. Mark	(1)	
CA1-6	RMA5022B	Bracket (Plastic), Telescopic Ant.	1	Z
CA2	RYFF1130LBXG	Cabinet Back Cover Assembly	1	OX
CA2	RYFF1130LBXI	Cabinet Back Cover Assembly (Only for Italy)	1	OX
CA2-1	(Not Available, Order	Cabinet Back Cover	(1)	
	RYFF1130LBXG or	Indicating Plate, VOLTAGE	(1)	
	RYFF1130LBXI	SELECTOR & AC IN Mark		
CA2-2	RGX639Z	Ornament	1	Z
CA2-3	RGT487Z	Name Plate	1	OZ
CA2-3	RGT487Y	Name Plate (Only for Italy)	1	OZ
CA2-4	RJC205B	Terminal, Battery \oplus Side	2	X
CA2-5	RJC603Z	Terminal (Spring), Battery \ominus Side	2	X
CA2-6	RJT398A	Connecting Pipe, Terminal	2	Z
CA2-7	RHG307A	Rubber Cushion, Gyro Ant.	2	Z
CA3	XEARR252EASY	Telescopic Antenna	1	X
CA4	RJF1044Z	Terminal Board, EXT ANT.	1	Y
CA5	RJT732-2	Terminal (Spring), Dial Light Switch	1	Y
CA6	RJT482Z	Terminal, Dial Light Switch	1	Y
CA7	RMA139Z	Bracket (Metal), Telescopic Ant.	1	OY
CA8	RKK9001Z	Battery Cover, Battery Compartment	1	X

CA10	RBN336Z	Button, Dial Light Switch	1	OX
CA11	RBN352Z	Knob, Tuning	1	OX
CA12	RBS94Z	Knob, Fine Tuning	1	OX
CA13	RBS95ZK	Knob, Volume, Bass & Treble	3	OX
CA14	RBS96Z	Knob, Band	1	OX
CA15	SHRA403	Knob, ON/OFF Timer	1	OX
CA16	XTN23+6B	Latch, EXT Ant. Terminal	2	OZ
		Screw, Dial Light Switch	2	Z
CA17	XTN3+8B	Terminal		
		Screw, Bracket (Telescopic Ant.)	1	Z
CA18	XYN3+F6S	M'tg	1	Z
CA19	XTB3+45BFN	Screw, Telescopic Ant. M'tg	1	Z
		Screw, Cabinet Back Cover M'tg	5	Z

CHASSIS

CH1	RYDF1130LBXG	Dial Assembly	1	OX
CH1-1		Base, Dial	(1)	
CH1-2		Roller, Dial	(2)	
CH1-3		Shaft, Gear (Low Frequency Side)	(1)	
CH1-4	Not Available,	Gear, Roller (High Frequency Side)	(1)	
CH1-5	Order	Gear (Large), Dial	(1)	
	RYDF1130LBXG	Circrip, Gear M'tg	(1)	
CH1-6		Dial	(1)	
CH1-7		Gear, Low Frequency Side	(1)	
CH1-8		Spring, Gear (Low Frequency Side)	(1)	
CH1-9	RDD200Z	Drum (Small), Dial	1	Y
CH1-10	RDR21-1	Pulley, Dial	1	Y
CH1-11	RDR20-3	Pulley, Dial	1	Y
CH1-12	RDY31A	Shaft, Pulley	2	Z
CH1-13	RDY9079Z	Shaft, Tuning	1	OY
	XUCR5FY	Circrip, Tuning Shaft	1	Z
CH1-14 (Fig. 12)	XTW3+10B	Screw, Drum (RDD200Z) M'tg	1	Z
	XWC3B	Washer, Drum (RDD200Z) M'tg	1	Z
CH1-15	RDD304Z	Drum (Large), Dial	1	OY
CH1-16	RDS40604A	Spring, Drum	2	OY
CH1-17	RDZ05A	Cord (500m), Dial	1 Roll	Y
CH2	RYE1F1130N	Gyro Antenna Base Assembly	1	OX
CH2-1	(Not Available,	Base, Gyro Antenna	(1)	
CH2-2	Order	Indicating Plate	(1)	
	RYE1F1130N			
CH2-3	RHR758Z	Stopper, Gyro Antenna	1	OZ
CH2-4	RNE914	Bracket, Stopper	1	Z
CH3	RYE2F1130N	Gyro Antenna Case Assembly	1	OX
CH3-1	(Not Available,	Case, Gyro Antenna	(1)	
CH3-2	Order	Shaft, Gyro Antenna Case	(1)	
	RYE2F1130N			
CH4	RUS238Z	Washer, Gyro Antenna Case M'tg	1	OZ
CH5	RHE6021Z	Washer, Gyro Antenna Case M'tg	3	OZ
CH6	XUC9FZ	Circrip, Gyro Antenna Case M'tg	1	OZ
CH7	RHR986Z	Cushion, Gyro Antenna	2	Z
CH8	RKE177Z	Cover, Gyro Antenna	1	OY
	XAMR46T200	Pilot Lamp, Dial Light, 6V 40mA	1	X
	RSM2805B-K	Meter, Tuning & Battery	1	X
	RJJ10C	Jack, Earphone or EXT. Speaker	1	Y

CH9
CH10

CH11 (Fig. 6)

CH12 (Fig. 3)

CH13 (Fig. 2)

CH14 (Fig. 2)

CH15 (Fig. 2)

CH16 (Fig. 2)

CH17 (Fig. 5)

CH18 (Fig. 5)

CH19 (Fig. 4)

RJJ30Z-H
RJE10Z
RJS31-1
RMW125ZS
RMY90Z
ROK597ZK
RHG632Z
XRY35X7
XTN3+12B
XTW3+6L
XNS8

XNS8R

XWVB

XTN3+10BR
XTN3+25BR
XTW3+12BR
XTW3+10BR
XTN3+8B

XTW3+8B

XYN26+C5

Jack, EXT. Power Source
Cover, EXT. Power Source Jack
Jack, Phono & Rec Out
Bracket, Radio Phono Selector
Heat Sink, Transistor
Indicating Plate, Band Selector
Rubber Cushion, Timer
Spacer, Timer
Screw, Timer M'tg
Screw, Transformer M'tg
Nut, Fine Tuning & Band
Selector M'tg
Nut (Red), Bass, Treble & Volume
Control M'tg
Washer, Fine Tuning, Band
Selector & etc. M'tg
Screw (Red), Chassis M'tg
Screw (Red), Chassis M'tg
Screw (Red), Chassis M'tg
Screw (Red), Chassis M'tg
Screw, Gyro Ant. & Dial Base
M'tg
Screw, Gyro Ant. & Dial Base
M'tg
Screw, Dial Drum M'tg

ACCESSORIES

A1	XEH1A1-P	Earphone, Imp. 8Ω	1	Y
A2	RJA20Z-K	Power Cord, AC	1	Y
	RQC9011Z	Carring Belt	1	OY

PACKING MATERIALS

P1	RPP192Z	Polyethylene Cover	1	Z
P2	RPN9175Z	Pad Complete	1	Z
P3	(Not Available,	Pad, Left Side	(1)	
	Order	Pad, Right Side	(1)	
	RPN9175Z			
P4	RQX5943Z	Instruction Book	1	OY
P5	RPK401Z	Gift Box	1	OY
P5	RPK401Y	Gift Box (Only for Italy)	1	OY

Ref. No.	Part No.	Part Name & Description	Per	Remarks
CH9	RJJ30Z-H	Jack, EXT. Power Source	1	Y
	RJ531-1	Jack, Phono & Rec Out	1	Y
	RMW125ZS	Bracket, Radio Phono Selector	1	OZ
	RMY90Z	Heat Sink, Transistor	2	OZ
	RHG532Z	Indicating Plate, Band Selector	1	OZ
	XRY35X7	Rubber Cushion, Timer	2	OZ
	XTN3+12B	Screw, Timer M'lg	2	Z
	XTW3+6L	Screw, Transformer M'lg	2	Z
	XNSB	Nut, Fine Tuning & Band	2	Z
	XNSBR	Selector M'lg	2	Z
CH12(Fig 3)	XNSBR	Nut(Red), Bass, Treble & Volume Control M'lg	3	Z
	XWVB	Washer, Fine Tuning, Band Selector & etc. M'lg	5	Z
CH13(Fig 2)	XTN3+10BR	Screw(Red), Chassis M'lg	3	Z
	XTN3+25BR	Screw(Red), Chassis M'lg	2	Z
	XTW3+12BR	Screw(Red), Chassis M'lg	2	Z
	XTW3+10BR	Screw(Red), Chassis M'lg	1	Z
	XTN3+8B	Screw, Gyro Ant. & Dial Base M'lg	3	Z
CH16(Fig 5)	XTW3+8B	Screw, Gyro Ant. & Dial Base M'lg	1	Z
CH16(Fig 4)	XYN26+05	Screw, Dial Drum M'lg	1	Z
Ref. No.	Part No.	Part Name & Description	Per	Remarks
P1	RPP192Z	Polyethylene Cover	1	Z
P2	RPN9175Z	Pad Complete	1	Z
	(Not Available)	Pad, Left Side	(1)	
	(RPN9176Z)	Pad, Right Side	(1)	
P4	RQX5943Z	Instruction Book	1	OY
P5	RPK401Z	Gift Box	1	OY
P5	RPK401Y	Gift Box(Only for Italy)	1	OY

PACKING MATERIALS

Ref. No.	Part No.	Part Name & Description	Per	Remarks
A1	XEH1A1-P	Barophone, Imp. 80	1	Y
	RJA20Z-K	Power Cord, AC	1	Y
	RQ9011Z	Carrying Belt	1	OY


ACCESSORIES

Ref. No.	Part No.	Part Name & Description	Per	Remarks
CH1	HYDF1130LBXG	Dial Assembly	1	OX
CH1-1		Base, Dial	(1)	
CH1-2		Roller, Dial	(2)	
CH1-3		Shaft, Gear(Low Frequency Side)	(1)	
CH1-4		Not Available		
CH1-5		Order		
CH1-6	RYDF1130LBXG	Dial	(1)	
CH1-7		Gear, Low Frequency Side	(1)	
CH1-8		Spring, Gear(Low Frequency Side)	(1)	
CH1-9		Drum(Small), Dial	(1)	
CH1-10	RDR21-1	Pulley, Dial	1	Y
CH1-11	RDR20-3	Pulley, Dial	1	Y
CH1-12	RDY31A	Shaft, Pulley	2	Y
CH1-13	RDT9079Z	Shaft, Tuning	1	OY
CH1-14(Fig 12)	XUCR5FY	Circip, Tuning Shaft	1	OY
	XTW3+10B	Screw, Drum(RDD200Z) M'lg	1	Z
	XWC3B	Washer, Drum(RDD200Z) M'lg	1	Z
CH1-15	RDD304Z	Drum(Large), Dial	1	OY
CH1-16	RDS40604A	Spring, Drum	2	OY
CH1-17	RDZ05A	Cord(50cm), Dial	1	Y
CH2	RYE1F1130N	Gyro Antenna Base Assembly	1	OX
CH2-1		Base, Gyro Antenna	(1)	
CH2-2		Order		
CH2-3	(RYE1F1130N)	Stopper, Gyro Antenna	1	OZ
CH2-4	RNE914	Bracket, Stopper	1	Z
CH3	RYE2F1130N	Gyro Antenna Case Assembly	1	OX
CH3-1		Case, Gyro Antenna	(1)	
CH3-2		Order		
CH4	RUS238Z	Washer, Gyro Antenna Case M'lg	1	OZ
CH5	RHE6021Z	Washer, Gyro Antenna Case M'lg	3	OZ
CH6	XUC9FZ	Circip, Gyro Antenna Case M'lg	1	OZ
CH7	RHR966Z	Cushion, Gyro Antenna	2	Z
CH8	RJJ100	Jack, Earphone or EXT. Speaker	1	Y

CHASSIS


Ref. No.	Part No.	Part Name & Description	Per	Remarks
CA9	RBC89Y	Button, Dial Light Switch	1	OX
CA10	RBN336Z	Knob, Tuning	1	OX
CA11	RBN352Z	Knob, Fine Tuning	1	OX
CA12	RB94Z	Knob, Volume, Bass & Treble	3	OX
CA13	RB95ZK	Knob, Band	1	OX
CA14	RB96Z	Knob, ON/OFF Timer	1	OX
CA15	SHRA403	Latch, EXT Ant. Terminal	2	OZ
CA16	XTN23+6B	Screw, Dial Light Switch	2	Z
CA17	XTN3+8B	Screw, Bracket(Telescopic Ant.)	1	Z
CA18	XYN3+F6S	Screw, Telescopic Ant. M'lg	1	Z
CA19	XTB3+45BPN	Screw, Cabinet Back Cover M'lg	5	Z

Schematic Diagram - Model RF-1130LB

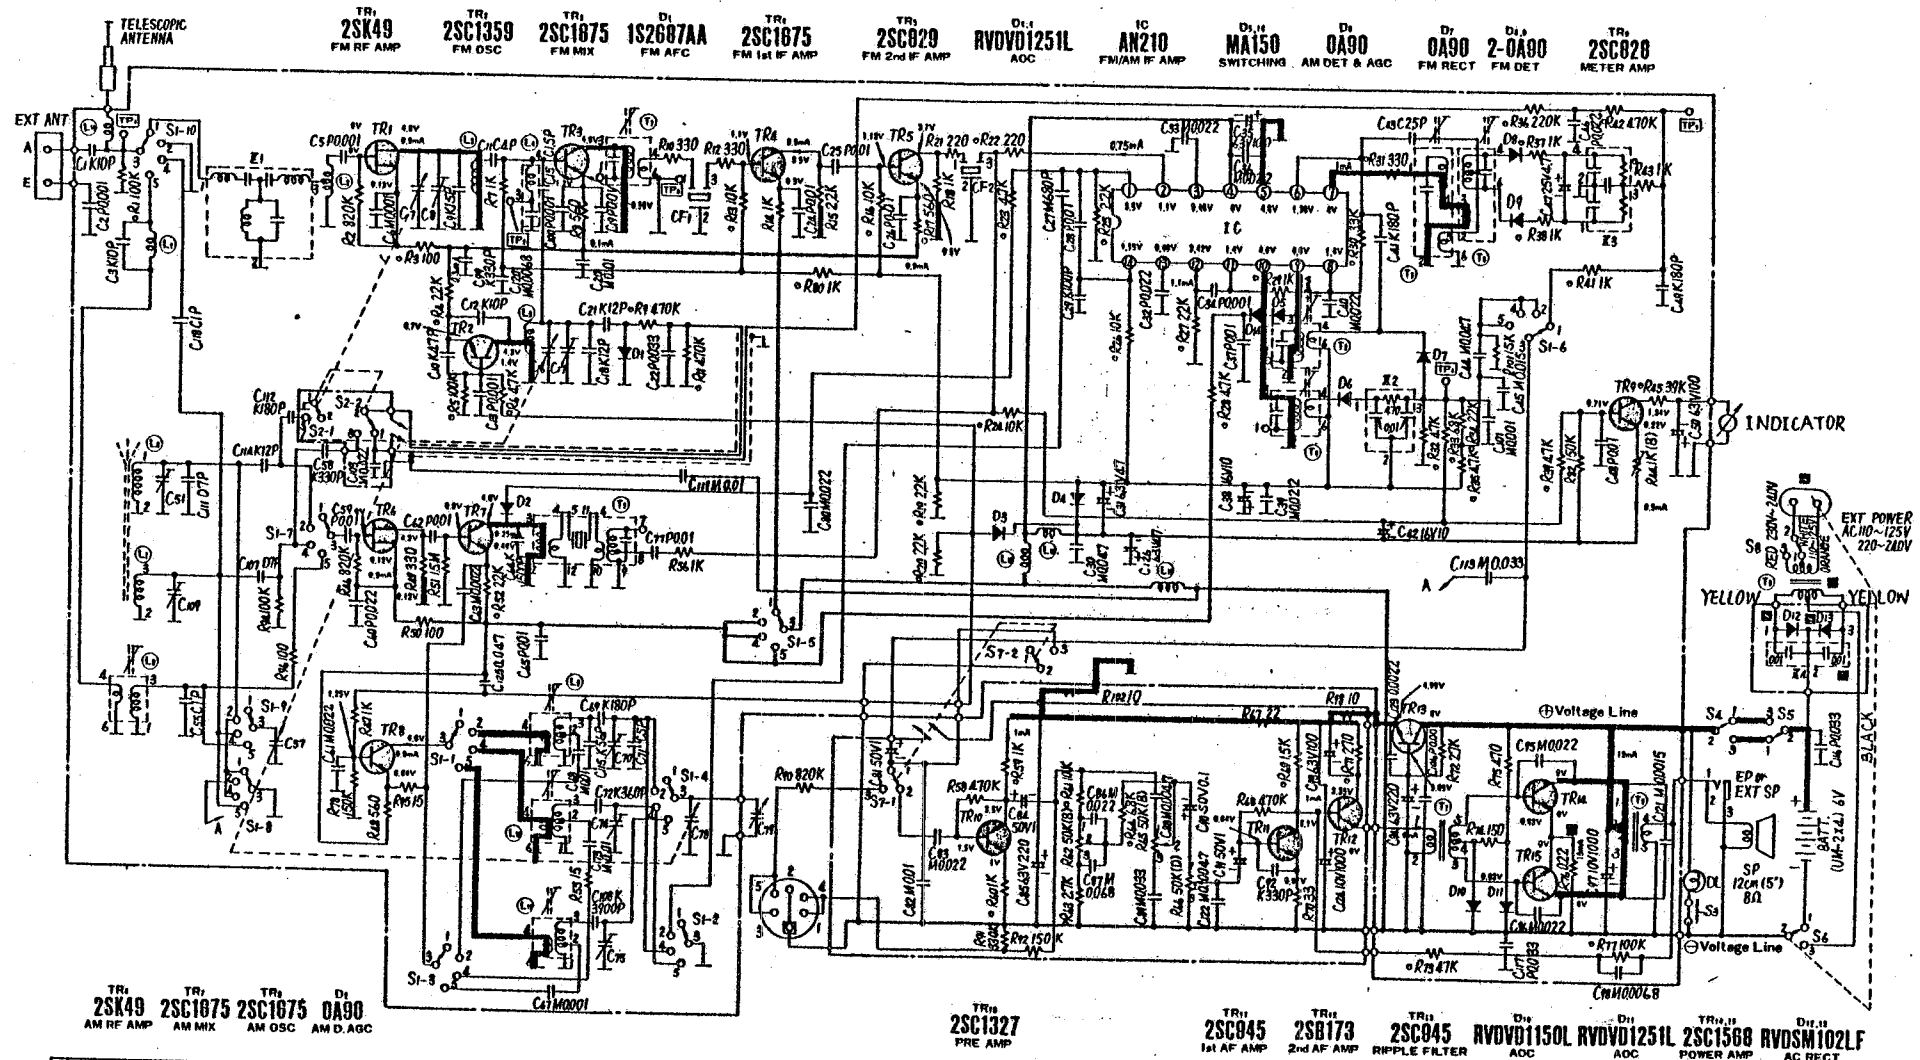


Notes:

- S1-S10: Band selector in "FM" position.
- S2-1: FM AFC MW DX-LOCAL switch in "ON" "DX" position.
- S2-2: LW DX-LOCAL switch in "DX" position.
- S3: Dial light switch in "OFF" position.
- S4: Power switch in "OFF" position.
- S5: Timer switch in "OFF" position.
- S6: AC-Battery selector in "Battery" position.
- S7: Radio-Phono selector in "RADIO" position.
- S8: Voltage selector in "110-125V" position.
- DC voltage measurements are taken with circuit tester 10kΩ/V from negative terminal of battery.
TR1 ~ FM position. TR6, 7, AM position.
- Battery current: No signal 45mA
Maximum output 700mA
- Printed resistors are shown by 0 mark.
- Indicates that only parts specified by the manufacturer be used for replacement in critical circuits.



Circuit Board Wiring View - Model RF-1130LB

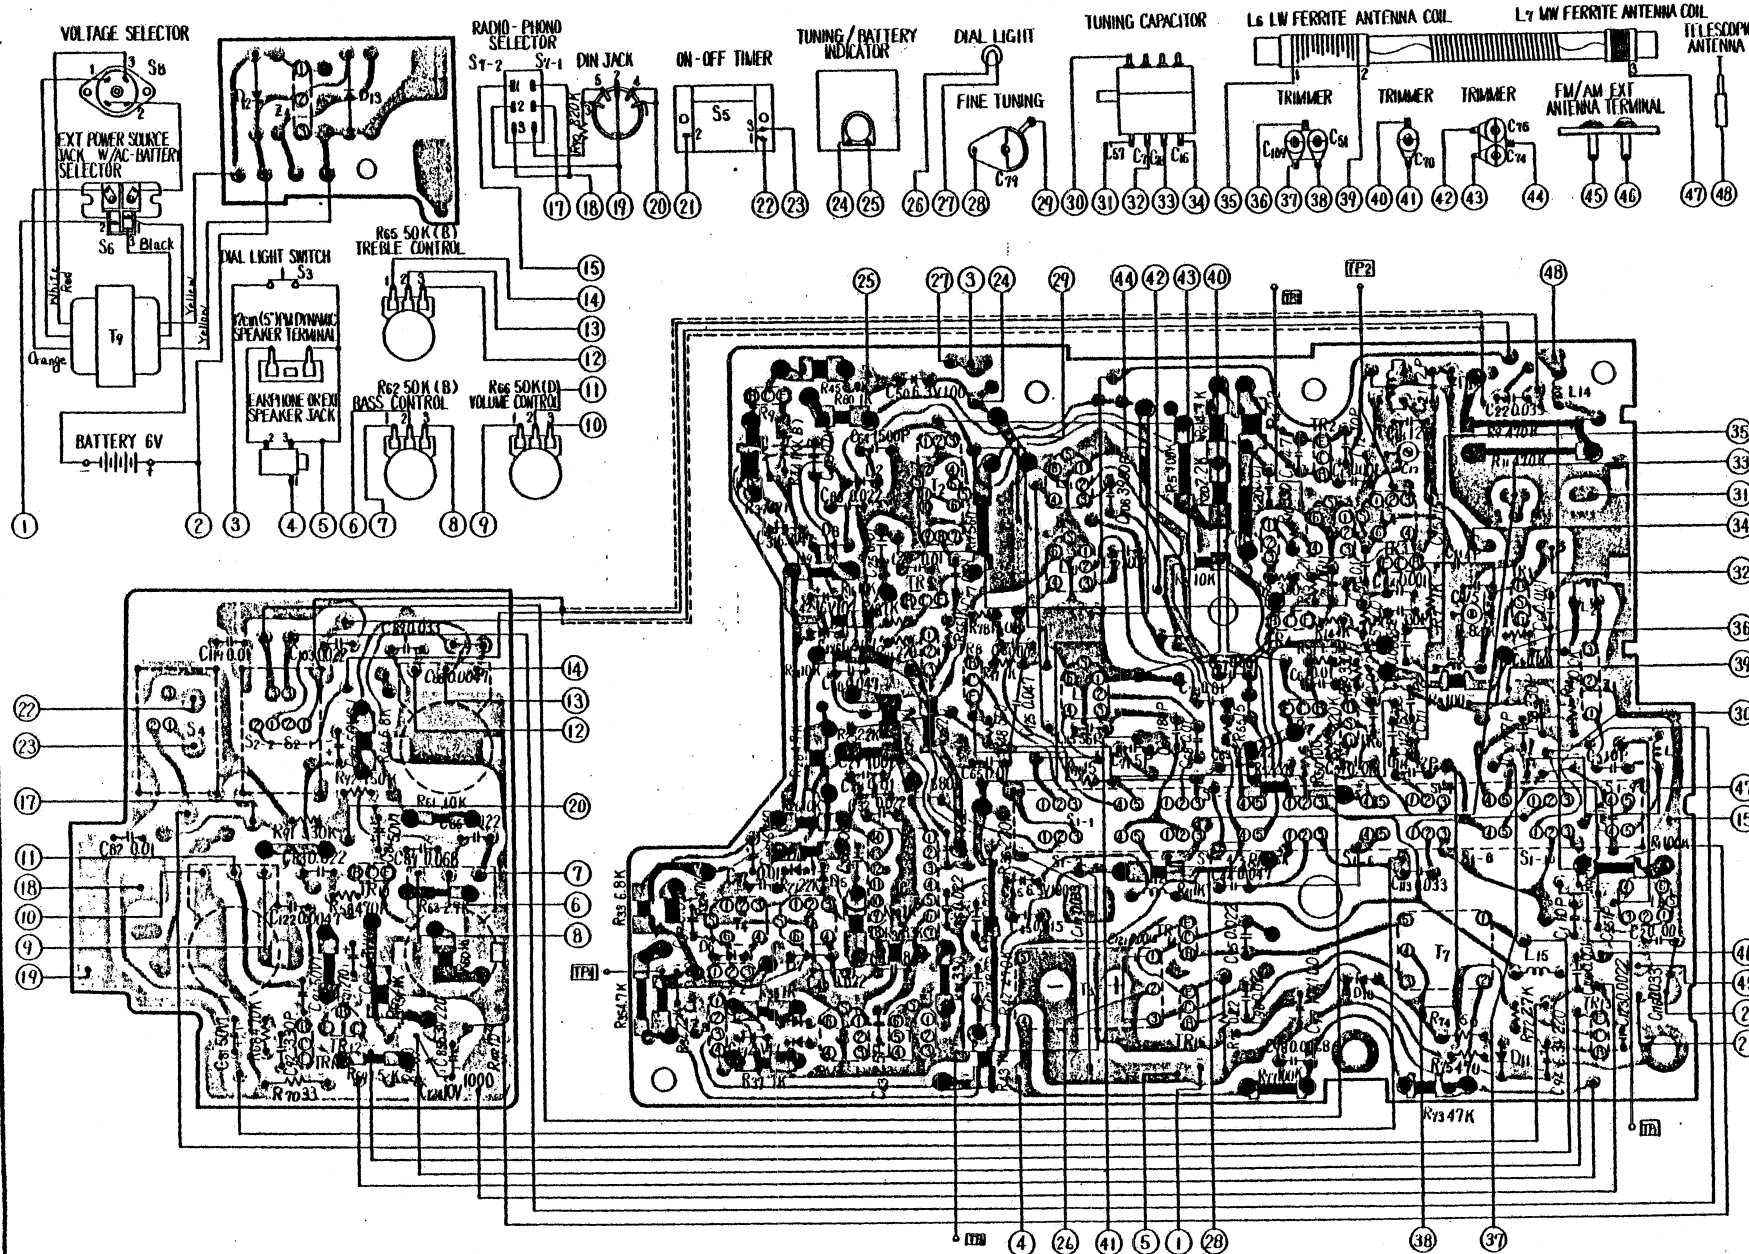

TR1	TR2	TR3
FM	FM	FM
D 4.6V	D 4.3V	D 4.6V
B 0.9V	B 1.4V	B 1.2V
E 0.13V	E 0.7V	E 0.66V
Ia 0.8mA	Ia 0.9mA	Ia 0.1mA

TR4	TR5	TR6
FM	FM	FM
D 3.8V	D 3.7V	D 4.3V
B 1.1V	B 1.12V	B 0.3V
E 0.8V	E 0.8V	E 0.22V
Ia 0.8mA	Ia 0.8mA	Ia 0.8mA

TR7	TR8	TR9
AM	AM	AM
D 4.6V	D 4.6V	D 1.34V
B 0.8V	B 1.25V	B 0.71V
E 0.44V	E 0.84V	E 0.0V
Ia 0.28mA	Ia 0.9mA	Ia 0.5mA

TR10	TR11	TR12
AM	AM	AM
D 3.8V	D 3.1V	D 0.0V
B 1.6V	B 0.84V	B 3.1V
E 1.0V	E 0.07V	E 5.35V
Ia 1mA	Ia 1mA	Ia 8mA

TR13	TR14,16
AM	AM
D 4.6V	D 4.6V
B 0.8V	B 0.8V
E 4.95V	E 0.0V
Ia 15mA	Ia 15mA

3	0.40V	10	0.4V
4	0V	11	1.4V
5	4.6V	12	3.42V
6	1.38V	13	0.48V
7	4V	14	1.18V

Printed Resistor
Conductive Paint

IC, TR & D		D12 TR11 TR12 D13 TR10										D6 TR4 D1 D2 D3 D4 D5 D7 D8 D9 D10 D11 D14 D15 D16 D17 TR2 TR6 D10 TR3 D1 D11 TR1 TR13									
1, 8, 1	T9											T4 T9 T6 T5 T2 L1 L2 L3 L4 L5 L6 L7 L8 L9 L10 L11 L12 L13 L14 L15 L16 L17 L18 L19 L20 L21 L22 L23 L24 L25 L26 L27 L28 L29 L30 L31 L32 L33 L34 L35 L36 L37 L38 L39 L40 L41 L42 L43 L44 L45 L46 L47 L48									